


GSE3122STG

Engine Parts Manual and Diagram

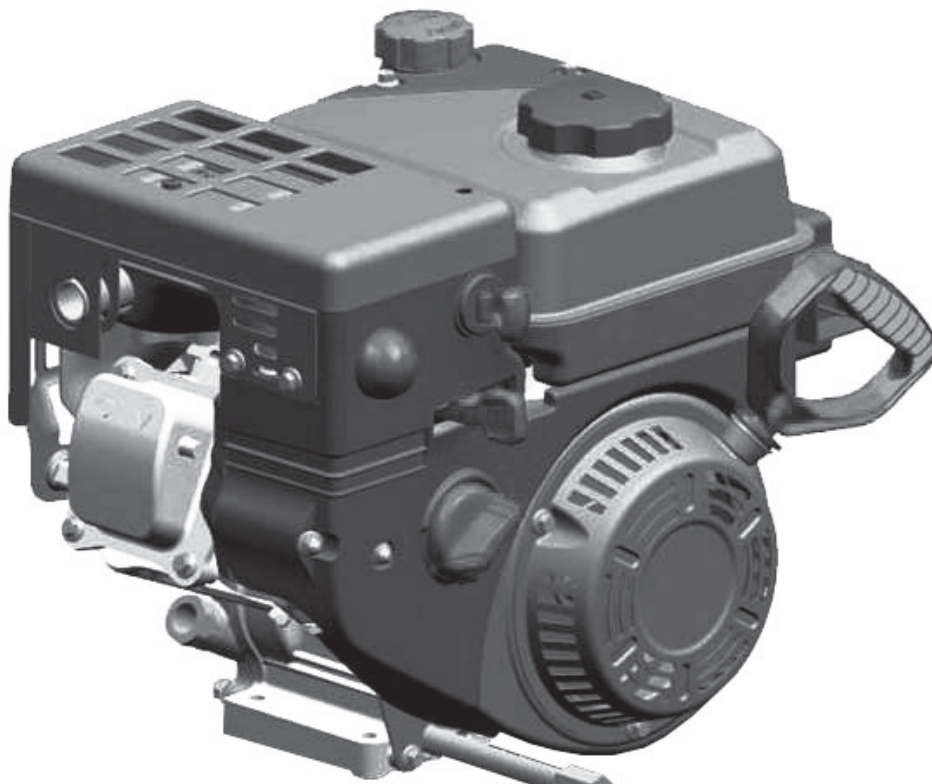

GSE3122STG

Ref #	Description
1	Crankcase
2	Washer
3	Oil drain plug
4	Bearing 6205
5	Crankshaft oil seal
6	Washer
7	Regulating sway bar
8	Split pin
9	Regulator gear assembly
10	Connecting rod assembly
11	Crankshaft assembly
12	Piston pin clip
13	Piston pin
14	Piston
15	Piston ring assembly
16	Crankcase gasket
17	Bearing 6205
18	Set pin
19	Oil dipstick
20	Oil filler
21	Crankcase cover
22	Seal
23	Oil plug
24	Crankshaft oil seal
25	M8×32 bolt
26	Pusher
27	Tappet
28	Pusher guide
29	Adjusting bolt for valve gap
30	Valve rocker
31	Sleeve
32	Lock nut
33	Exhaust valve
34	Intake valve
35	Set pinφ10×16
36	Cylinder head gasket
37	Spark plug
38	M8×34 bolt
39	Cylinder head Assembly
40	M6×96bolt
41	Wind cover
42	M6×12 bolt
43	Valve spring
44	Intake valve spring seat
45	Exhaust valve spring seat
46	Cap

Ref #	Description
47	Air duct
48	Cylinder head cover gasket
49	Cylinder head cover assembly
50	Bolt
51	Exhaust gasket
52	Exhaust muffler
53	Regulating spring
54	Back spring
55	Pulling rod
56	Regulating frame assembly
57	Lock bolt
58	M6 nut
59	Regulating arm
60	Inlet gasket
61	Connecting block
62	Carburetor assembly
63	Carburetor gasket
64	Choke Bracket
65	Choke line
66	Air cleaner gasket
67	Cover
68	Flywheel
69	Flywheel fan
70	Starting flange
71	M14×1.5 nut
72	M6×12 bolt
73	Fan hood assembly
74	Engine switch
75	Diode
76	M6×22 bolt
77	Crankcase side plate assembly
78	M6×8 bolt
79	Recoil starter
80	Ignition coil assembly
81	M6×25 screw
82	Oil sensor
83	M6×14 bolt
84	Camshaft assembly

GSE3122STG Engine

