


# GSE7500W

## Parts Manual and Diagram

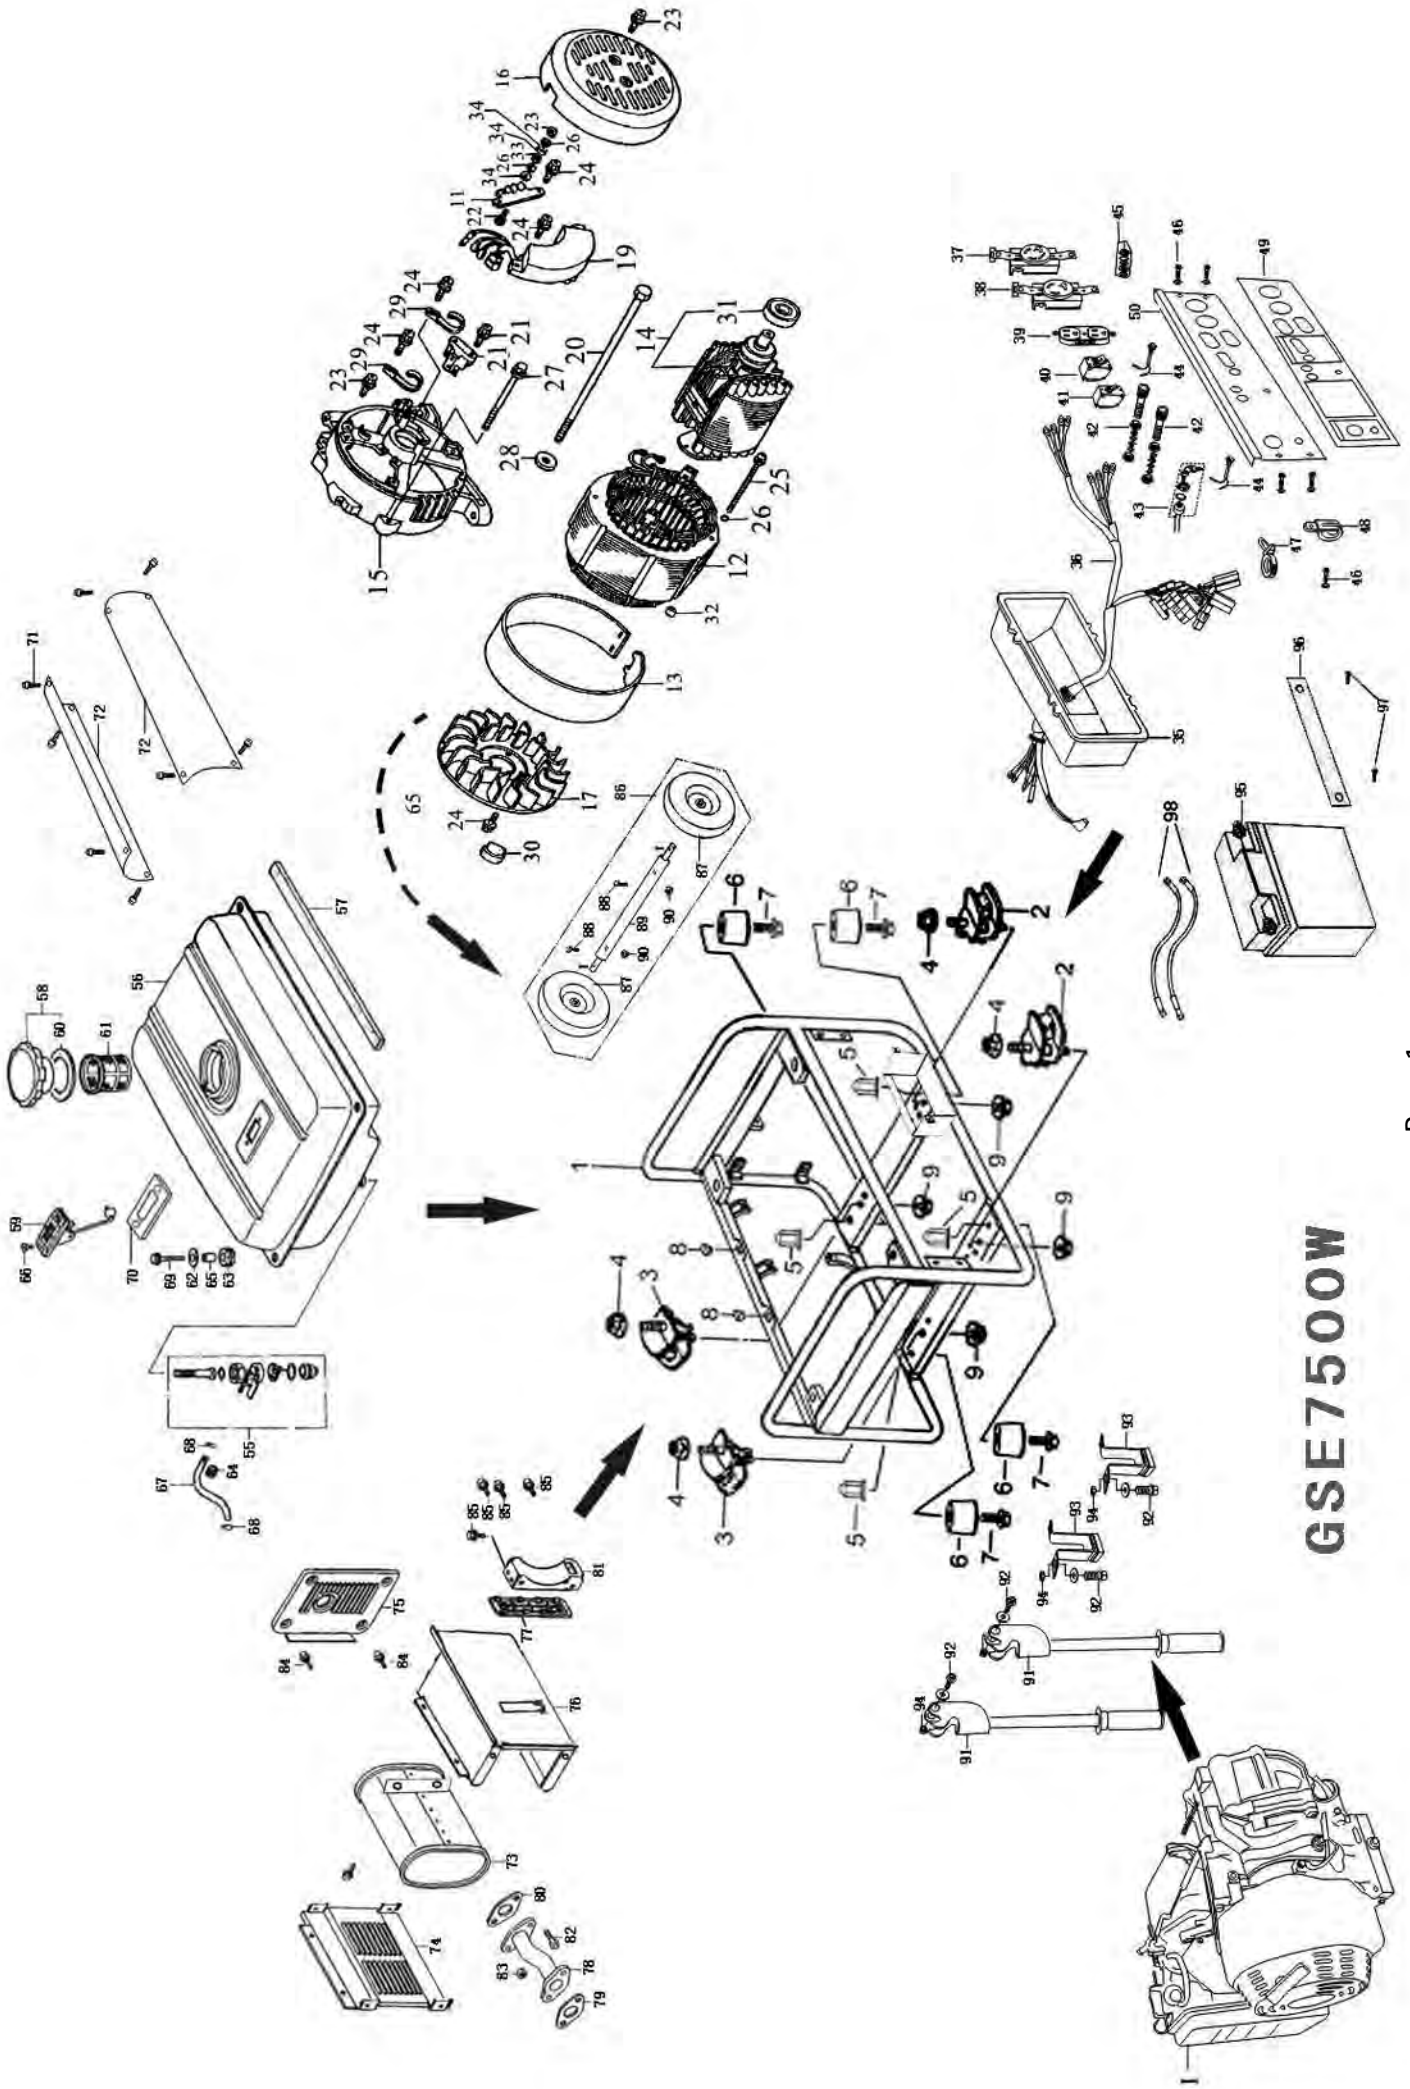




# GSE7500W

<b>GSE7500W Spare Parts List</b>			
Code	Parts No.	Description	Quantity
I	190FD	Engine	1
1	41100	Frame comp.	1
2	41310/4GF-3	Bottom rubber A	2
3	41320/2.8GF-3	Bottom rubber B	2
4	GB6177-86	Nut M10	4
5	GB802-88	Nut M6	4
6	41350/2GF-3	Cushion, frame	4
7	GB5787-86	Bolt M6×12	4
8	41116/2GF-3	Rubber pad, frame	2
9	GB6177-86	Nut M8	4
11	31415/2.8GF-3	Connecting plate	1
12	31200	Stator Assy	1
13	31936	Stator cover	1
14	31100	Rotor Assy	1
15	31411/2.8GF-3	Generator stay	1
16	31938/2.8GF-3	Generator end cover	1
17	31141/2.8GF-3	Generator fan	1
18	31370/2.8GF-3	Brush Assy	1
19	31600	Voltage regulator	1
20	31933	Bolt M10×265	1
21	31997/2.8GF-3	Screw M5×18	1
22	GB5783-86	Bolt M5×20	2
23	31995/2GF-3	Screw M5×12	3
24	31996/2GF-3	Screw M5×14	9
25	31414	Bolt M5×213	2
26	GB93-87	Spring washer 5mm	6
27	31931	Bolt M6×175	4
28	31134/2.8GF-3	Plain washer	1
29	32216/2.8GF-3	Clip A	2
30	11325/2.8GF-3	Plug, sump	1
31	GB276-94	Bearing 6204-2ZN	1
32	31932/2.8GF-3	Nut M5	2
33	GB6170-86	Nut M5	4
34	GB97.1-85	Washer 5mm	6

Code	Parts No.	Description	Quantity
35	37321/2.8GF-3	Control panel case	1
36	32100	Main wire harness Assy	1
37	35510	Consent(A4)	1
38	35510	Consent(3)	1
39	35510	Consent	2
40	31710	Circuit protector	1
41	31710	Circuit protector	1
42	31710	Output port	2
43	35410	Ignition switch	1
44	37871	Light	1
45	32520	Earth terminal set	1
46	GB5787-86	Bolt M6×12	10
47	32412	Wire grommet	1
48	32413	Wire clamp	1
49	68512	Panel switch mark	1
50	37310/2.8GF-3	Control panel	1
55	16930/2GF-3	Fuel cock	1
56	16610/2.8GF-3	Fuel tank	1
57	16812/2.8GF-3	Stripe, fuel tank	1
58	16500/2GF-3	Fuel filler cap comp.	1
59	37820/2GF-3	Fuel sensor	1
60	16521/2GF-3	Packing ring	1
61	16916/2GF-3	Fuel filler	1
62	16821/2GF-3	Washer	4
63	16811/2GF-3	Cushion	4
64	16933/2.8GF-3	Grommet	1
65	16824/2GF-3	Fitting brush, fuel tank	4
66	GB819-85	Screw M5×10	2
67	16931/2.8GF-3	Outlet pipe (□9×□4.5×160)	1
68	16937/168F	Tube clip	2
69	GB5787-86	Flange bolt M6×22	4
70	37825/2GF-3	Gasket, fuel sensor	1
71	GB5787-86	Bolt M6×12	8
72	16531	Protecting board	2
73	18300	Muffler	1
74	18620/2.8GF-3	Outer hood	1
75	18631/2.8GF-3	Side hood	1
76	18610	Inner hood	1

Code	Parts No.	Description	Quantity
77	18615/2.8GF-3	Gasket, inner hood	1
78	18111/182F-AV	Exhaust pipe	1
79	18221/173F-AV	Gasket, exhaust pipe	1
80	12255/173F	Gasket, outlet	1
81	18710/2.8GF-3	Muffler stay	1
82	GB5787-86	Flange bolt M8×25	2
83	GB6187-86	Nut M8	2
84	GB5787-86	Flange bolt M6×12	7
85	GB5787-86	Flange bolt M8×16	4
86	42000	Wheel kit Assy	1
87	42150	Wheel kit	2
88	GB5787-86	Bolt M8×16	2
89	42130	Wheel axel	1
90	GB6177-86	Screw M8	2
91	41340	Handrail	2
92	GB5787-86	Screw M8×40	2
93	41136	Support	2
94	GB6177-86	Nut M8	2
95	60794	Battery	1
96	67110	Board	1
97	GB5787-86	Flange bolt M6×12	2
98	65539	Battery wire	1

(I)

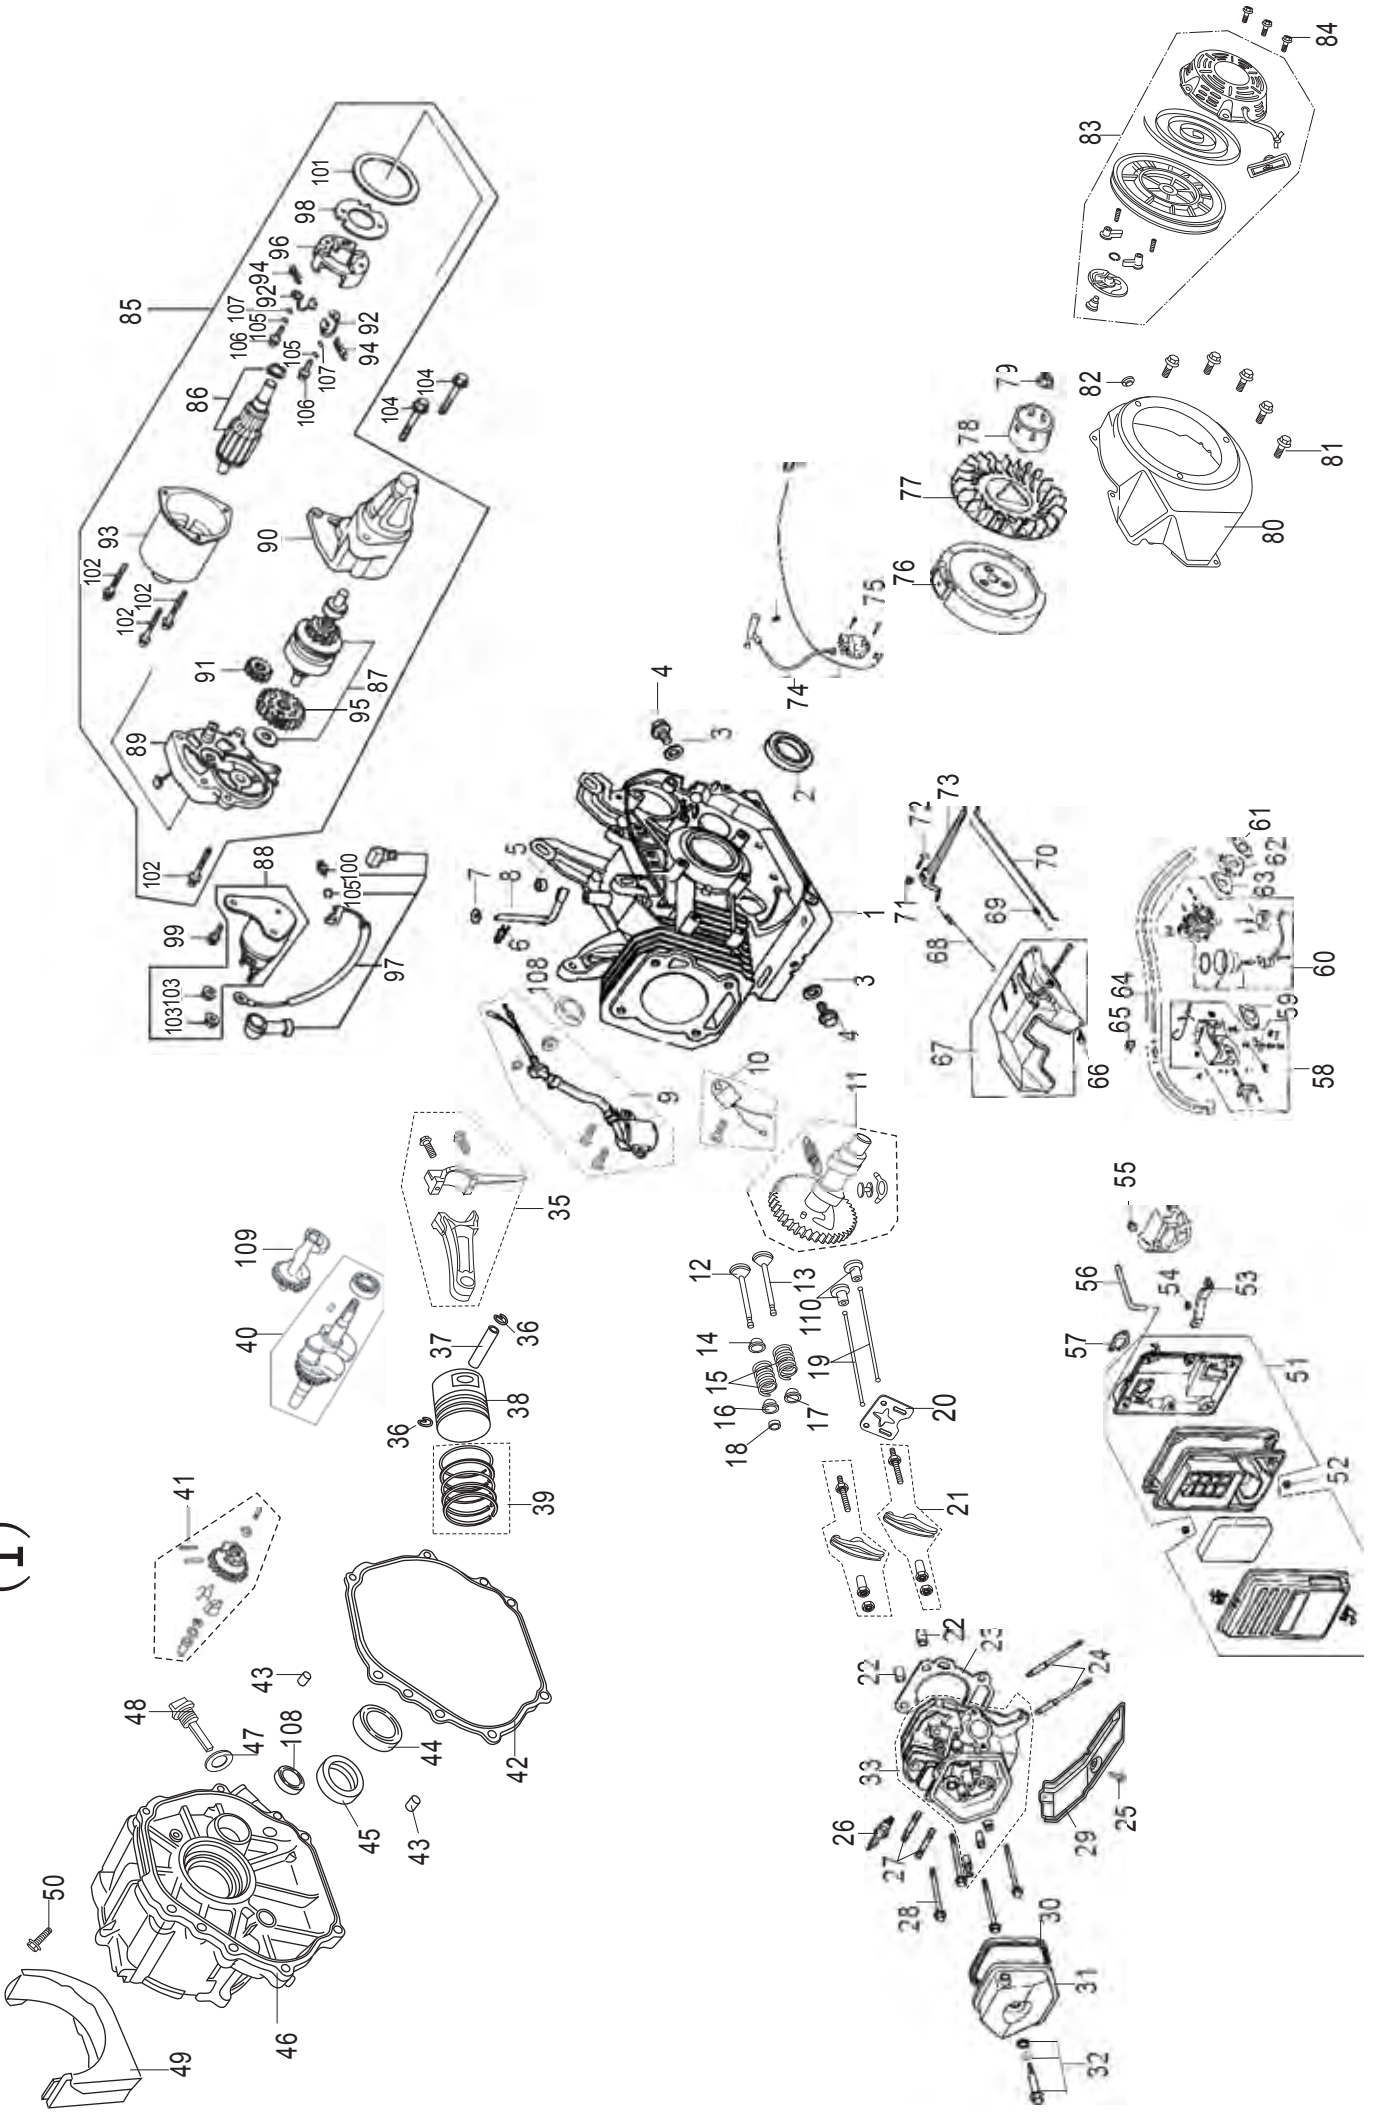

## Engine Spare Parts List

Code	Parts No.	Description	Quantity
1	11100	Crankcase	1
2	13180	Oil seal, crankshaft	1
3	11213	Washer	2
4	11212	Drain plug	2
5	26390	Oil seal, regulating sway bar	1
6	26321	Split pin	1
7	26329	Washer	1
8	26311	Regulating sway bar	1
9	37810	Oil sensor	1
10	37850	Diode	1
11	14100	Camshaft Assy	1
12	14721	Exhaust valve	1
13	14711	Intake valve	1
14	14753	Spring retainer, exhaust valve	1
15	14755	Valve spring	2
16	14757	Spring seat, exhaust valve	1
17	14751	Spring seat, intake valve	1
18	14758	Cap, exhaust valve	1
19	14250	Pusher	2
20	14261	Pusher guide	1
21	14410	Valve rocker Assy	2
22	12218	Set pin	2
23	12220	Gasket, cylinder head	1
24	12252	Stud M6×M8×106	2
25	GB5787-86	Bolt M6×12	1
26	34200/168F	Spark plug F6RTC	1
27	12253	Stud M8×35	2
28	12256	Flange bolt	4
29	19721	Lead wind cover	1
30	12312	Gasket, cylinder head cover	1
31	12310	Cylinder head cover Assy	1
32	12410	Bolt	1
33	12210	Cylinder head Assy	1
34	16931	Outlet pipe (□9×□4.5×160)	1
35	13130	Connecting rod Assy	1
36	13222	Piston pin circlip	2
37	13221	Piston pin	1
38	13211	Piston	1
39	13300	Piston ring assy	1
40	13110	Crankshaft sets	1
41	25120	Driven gear set, regulator	1
42	11119	Gasket, crankcase	1

Code	Parts No.	Description	Quantity
43	11118	Set pin	2
44	GB276-89	Bearing 6207	1
45	13180	Oil seal , crankshaft	1
46	11311	Crankcase cover	1
47	15611	Dipstick	1
48	15612	Seal	1
49	11340	Guard,crankcase cover	1
50	31995	Bolt M5×12	3
51	17100	Air cleaner Assy	1
52	GB6177-86	Nut M5	6
53	17171	Air cleaner stay	1
54	GB6177-86	Nut M6	1
55	20652	Boot, vent pipe	1
56	20651	Air duck	1
57	17330	Gasket, air cleaner	1
58	16300	Manual choke Assy	1
59	17330	Gasket, air cleaner	1
60	16100	Carburetor Assy	1
61	12254	Gasket, inlet	1
62	16141	Connecting block, carburetor	1
63	16142	Gasket, carburetor	1
64	17410	Check valve Assy	1
65	32215	Clamp, check valve	1
66	GB5787-86	Bolt M6×12	2
67	26420	Supporting plate set	1
68	26363	Back spring	1
69	26364	Fine regulating spring	1
70	26341	Pulling rod	1
71	GB6177-86	Nut M6	1
72	26362/168F	Lock bolt	1
73	26331	Regulating arm	1
74	34500	Ignition coil unit	1
75	GB5787-86	Bolt M6×30	2
76	27500	Flywheel	1
77	19722	Flywheel fan	1
78	27371	Starting flange	1
79	27515	Nut M16×1.25	1
80	19710	Fan hood assy	1
81	GB5787-86	Bolt M6×12	5
82		Fan hood plug	1
83	27300	Recoil starter	1
84	GB5787-86	Bolt M6×8	3
85	38200/182FD	Relay,start-up	1
86	28610/182FD	Rotor comp	1
87	28100/182FD	Starting clutch	1

Code	Parts No.	Description	Quantity
88	28000/182FD	Starting motor Assy	1
89	28650/182FD	Base,starting	1
90	28110/182FD	Housing,starting clutch	1
91	28311/182FD	Driven gear	1
92	28630/182FD	Brush comp	4
93	28620/182FD	Stator comp	1
94	28631/182FD	Spring,brush	4
95	28321/182FD	Reducing gear	1
96	28641/182FD	Stay,brush	1
97	32160/182FD	Cable,starting motor	1
98	28632/182FD	Insulator	1
99	31996/2GF-3	Bolt,M5x14	2
100	GB818-85	Screw,M4x6	1
101	28651/182F-AS	Packing ring	1
102	GB818-85	Screw,M5x32	4
103	GB6170-86	Nut,M6	2
104	GB5787-86	Bolt,M8x35	2
105	GB93-87	Spring washer,4	3
106	GB818-85	Screw,M4x14	2
107	GB97.1-85	Washer,4	2
108	GB276-89	Bearing 6202	2
109	13611	Balancing shaft	1
110	14455	Tappet	2



**1-877-270-7772**  
**6226 Danville Road**  
**Mississauga, ON, L5T 2H7**